

**Users Guide:
GSM0308UG001**

**Enfora GSM/GPRS Family
API Reference**

Version: 1.02

**Enfora, Inc.
www.enfora.com**

Document Title:	Enfora GSM/GPRS Family API Reference
Version:	1.02
Date:	04/10/08
Status:	Release
Document Control ID:	GSM0308UG001

General

All efforts have been made to ensure the accuracy of material provided in this document at the time of release. However, the items described in this document are subject to continuous development and improvement. All specifications are subject to change without notice and do not represent a commitment on the part of Enfora, Inc. Enfora, Inc. will not be responsible for any loss or damages incurred related to the use of information contained in this document.

This product is not intended for use in life support appliances, devices or systems where a malfunction of the product can reasonably be expected to result in personal injury. Enfora, Inc. customers using, integrating, and/or selling this product for use in such applications do so at their own risk and agree to fully indemnify Enfora, Inc. for any damages resulting from illegal use or resale.

Copyright

Complying with all applicable copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose, without the express written permission of Enfora, Inc.

Enfora may have patents, patent applications, trademarks, copyrights or other intellectual property rights covering subject matter in this document. Except as expressly provided in any written license agreement from Enfora, the furnishing of this document does not give you any license to these patents, trademarks, copyrights or other intellectual property.

©2002 – 2007 Enfora, Inc. All rights reserved.

Enabler and Spider are either registered trademarks or trademarks of Enfora, Inc. in the United States.

Date	Rev	Author	Description
December 11 th , 2006	Draft	C. Patel	Draft
June 26, 2007	1.00	Tom Cone	Initial Release
November 9, 2007	1.01	Diane O'Neil	Edited Table 6 – API Table
	1.02	Scott Wittrock	Added API Optional Header

Table Of Contents

1	Overview.....	4
2	References.....	5
3	Modem Communication.....	6
3.1	Serial Communication.....	6
3.2	Over The Air Communication.....	7
4	AT Commands Over DUN or OTA.....	8
4.1	IP Header.....	11
4.2	UDP Header.....	13
4.3	TCP Header.....	14
4.4	API Header.....	15
4.4.1	Wakeup Messages.....	17
4.4.2	Send Password to Modem.....	18
4.4.3	Read/Write AT Command Request.....	19
4.4.4	Unsolicited Messages.....	20
4.4.5	ACK Messages.....	20
4.4.6	ERROR Messages.....	21
4.4.7	API Optional Header.....	21
4.4.7.1	End of Option Sequence – Type 0.....	24
4.4.7.2	MDMID – Type 1.....	25
4.4.7.3	Output Message Event Format- Type 2.....	26
4.4.7.4	Event Sequence Number – Type 3.....	26
5	Terms Explained.....	27
5.1	Big Endian.....	27
5.2	Byte.....	27
5.3	Little Endian.....	27
6	Example:.....	28

1 Overview

This document provides a description of the Application Program Interface (API) for the Enfora's GSM/GPRS modems.

With this API, programmers can access information and control modem functions in real-time. A wide range of information is available via the API and includes modem management and status functions. This environment would best be utilized where a customized software application is being considered and real-time performance parameters are mandatory. A good example of the necessity for the API is in a real-time monitoring application that includes a status window to report performance and indicate when network conditions begin to degrade. Data is consistently being updated during the established session.

Many host computers, which use this API, will contain a TCP/IP stack, which includes UDP and Point-to-Point Protocol (PPP). However, this is not a requirement. This API includes documentation and details to create your own UDP and PPP formatting for a minimal implementation.

This document contains proprietary information and must not be reproduced without the prior written consent of Enfora, Inc. (Enfora).

2 References

1. GSM0308AT001 - Enabler III AT Command Set
2. GSM 07.05: “Digital cellular telecommunications systems (Phase 2+); Use of Data Terminal Equipment – Data Circuit terminating Equipment (DTE – DCE) interface for Short Message Service (SMS) and Cell Broadcast Service (CBS)”.
3. GSM 07.07: “Digital cellular telecommunications systems (Phase 2+); AT command set for GSM Mobile Equipment (ME)”.
4. ITU-T Draft new Recommendation V.25ter: “Serial asynchronous automatic dialing and control”.

3 Modem Communication

Most AT commands may be read and/or written via UDP/IP or TCP/IP. The implemented AT command set is a compliant subset of GSM Ref. 07.07, GSM Ref. 07.05, and ITU-T Ref. V.25ter.

The AT command state is entered upon power-up/reset. The modem always starts in AT command mode. Use Windows HyperTerminal or similar application to send AT commands to the modem. Connect directly to the COM port used by the modem.

If real-time status/control is not required, the AT Command set may offer an easier integration alternative. Refer to AT Command Set Reference document (Enfora Document GSM0107PB001MAN) for a list of AT commands.

The user may choose to use AT Commands to configure the modem and/or start GSM/GPRS registration before switching to the UDP/IP or TCP/IP messaging for real-time status during data transfers.

A user can communicate with the modem via one of the two possible methods:

- RS232 Serial communication
- Over The Air (OTA) via SMS or GPRS

3.1 Serial Communication

Modem's default serial communication is set at 115200 baud, no parity, 8 data bits, 1 stop bit, and hardware flow control enabled. A user can send/receive AT commands, data, or response to/from the modem via one of the two methods:

- Straight serial communication via HyperTerminal or similar application
- Serial communication via Dial-Up Network (DUN)

Straight serial communication provides the user with the following capabilities:

- Send AT commands and receive response
- Receive SMS notification
- Make a voice, data or fax call
- Receive any unsolicited message

Serial communication via DUN provides the user with the following capabilities:

- Send and receive UDP/IP and/or TCP/IP data
- Surf the internet (provided data service is provided by the service provider) via internet explorer or similar application software
- Send AT commands via UDP/IP (described in section 4 of this document). The destination IP address and port number for AT commands sent via UDP/IP can be configured via AT\$UDPAPI command.
- Make a voice or fax call by sending AT commands via UDP/IP
- Receive SMS notification via UDP/IP
- Receive any unsolicited message via the UDP/IP

3.2 Over The Air Communication

A user can send/receive AT commands to configure the modem OTA via UDP/IP or TCP/IP. Configuration command request has to be sent at modem's IP address and port number configured by AT\$UDPAPI command for UDP/IP or AT\$TCPSRC command for TCP/IP. A user must make sure that they don't send non-configuration IP data at this port for the modem will ignore it. See section 7 for details on how AT commands can be sent OTA.

4 AT Commands Over DUN or OTA

Figure 1 describes the communication between a modem and a PC (or any RS232 compatible device) via a Dial-Up Network (DUN) connection. To send and receive AT commands over UDP/IP, a user must create the message first and then encapsulate it within a UDP/IP header. DUN connection must be established before the message is sent to the modem. The modem will process the request and respond depending on the type of request.

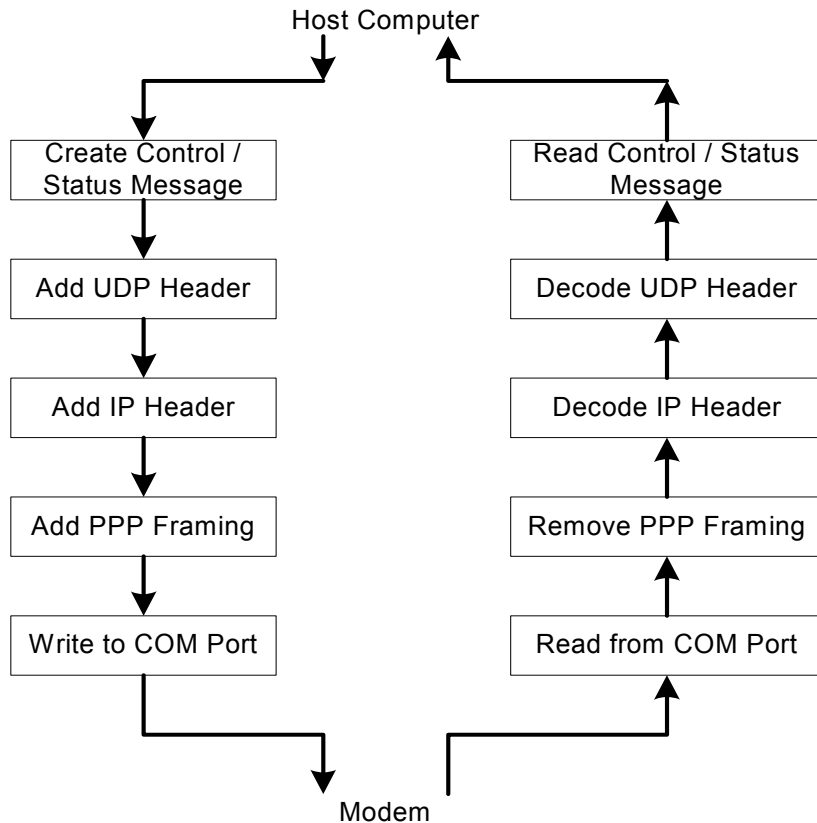


Figure 1. Communication Flow Chart.

Please note that API communication using the TCP protocol is ONLY available over the air (OTA). The TCP protocol is not operable over a PPP link. The UDP version of the API should be used for serial communication.

Table 1 describes the details of an AT command sent to the modem via UDP/IP over a DUN session. All messages are commanded from the host computer or remote host, and then responded to by the modem. The modem may generate unsolicited UDP/IP messages if subscribed.

Table 2 describes the details of an AT command sent to the modem via TCP/IP over the air. All messages are commanded from the remote host, and then responded to by the modem. The modem may generate unsolicited TCP/IP messages if subscribed.

The data order for all fields is big endian (most significant byte first).

As described below, most of the fields within the UDP and IP headers will remain constant for all messages. The fields that will have to be modified are: Length of IP Packet, Packet Number, IP header checksum, Source IP, Destination IP, Source Port number, Destination port numbers, UDP packet length, and UDP checksum

Bytes	Bits 0 – 7	Bits 8 – 15	Bits 16 – 23	Bits 24 – 31	Header Information
0 – 3	Version length	Type Of Service	Length of the IP Packet		IP Header
4 – 7	Packet Number		Fragmentation Offset		
8 – 11	Time To Live	Protocol	IP header checksum		
12 – 15	Source IP				
16 – 19	Destination IP				
20 – 23	Source Port Number		Destination Port Number		UDP Header
24 – 27	Length of UDP Packet		UDP Checksum		
28 – 31	API Number		Command Type	API Optional Header Size (bytes)	API Message Header
32 thru (32+m)	API Optional Header (m bytes)				
(32+m) thru n	Data/AT command				Data

Table 1 - ATI command sent via UDP/IP

Bytes	Bits 0 – 7	Bits 8 – 15	Bits 16 – 23	Bits 24 – 31	Header Information
0 – 3	Version length	Type Of Service	Length of the IP Packet		IP Header
4 – 7	Packet Number		Fragmentation Offset		
8 – 11	Time To Live	Protocol	IP header checksum		
12 – 15	Source IP				
16 – 19	Destination IP				
20 – 23	Source Port Number		Destination Port Number		TCP Header
24 – 27	Sequence Number				
28 – 31	Acknowledge Number				
32 – 35	Data Offset + Control Bits		Window		
36 – 39	TCP header checksum		Urgent Pointer		
40 – 43	Data Length*		API Number		API Message Header /Data
44 – 47	Command Type	API Optional Header Size (bytes)	API Optional Header (m bytes) or Data/AT command		
48 thru (46+m)	API Optional Header or Data/AT command (cont)				
(46+m) thru n	Data/AT command				Data

* Only used for API commands sent via TCP/IP

Table 2 - ATI command sent via TCP/IP

4.1 IP Header

The Internet Protocol (IP) header consists of 20 bytes. The definition and minimal implementation consists of the following (see RFC 791 for further details):

Bytes	Bits 0 – 7	Bits 8 – 15	Bits 16 – 23	Bits 24 – 31
0 – 3	Version length	Type Of Service	Length of the IP Packet	
4 – 7	Packet Number		Fragmentation Offset	
8 – 11	Time To Live	Protocol	IP header checksum	
12 – 15	Source IP			
16 – 19	Destination IP			

Table 3 - IP Header (RFC 791)

- Byte 0: 8-bit bit field for version and length. This API only supports version 4 with IP header length of $5 \times 4 = 20$ bytes. This field must be set to 0x45.
- Byte 1: 8-bit type of service. The API ignores this field. This field must be set to 0x00.
- Bytes 2 - 3: 16-bit total length of packet. This field must be changed for each API message. It includes the message data, IP header, and UDP header. This field equals data Length + 28 (size of UDP and IP headers).
- Bytes 4 - 5: 16-bit identification. This field may be incremented for each packet. It is not required and may be left 0x0000.
- Bytes 6 - 7: 16-bit Fragmentation offset. The API ignores this field. This field must be set to 0x0000.
- Bytes 8: 8-bit Time to live. The API ignores this field. This field must be set to 0x00.
- Bytes 9: 8-bit Protocol. The API only supports UDP. This field must be set to 17 (0x11).
- Bytes 10 - 11: 16-bit IP header checksum.
- Bytes 12 - 15: 32-bit source IP address. For messages from the host to the modem, this is the IP address of host's UDP port. This IP address may be any valid IP address desired by the user's application, but will need to match the host's TCP/IP stack. This IP address will be used as the destination IP address for all response messages from the modem.

Bytes 16 - 19: 32-bit destination IP address. For messages from the host to the modem, this is the IP address of modem's UDP API port. This IP address may be configured using AT commands if desired. This IP address will be used as the source IP address for all response messages from the modem. The default IP address for the modem's UDP API is 199.245.180.13. Unless changed via AT commands, byte 16 will be 199 (0xC7), byte 17 will be 245 (0xF5), byte 18 will be 180 (0xB4), and byte 19 will be 13 (0x0D).

4.2 UDP Header

The User Datagram Protocol (UDP) header consists of 8 bytes. The definition and minimal implementation consists of the following (see RFC 768 for further details):

Bytes	Bits 0 – 7	Bits 8 – 15	Bits 16 – 23	Bits 24 – 31
0 – 3	Source Port Number		Destination Port Number	
4 – 7	Length of UDP Packet		UDP Checksum	

Table 4 - UDP Header (RFC 768)

- Bytes 0 - 1: 16-bit source port number. For messages from the host to the modem, this is the source port number of the host's UDP port. This port may be any number desired by the user's application. This number will be used as the destination port for all response messages from the modem.
- Bytes 2 - 3: 16-bit destination port number. For messages from the host to the modem, this is the port number of the modem's UDP API port. The modem's UDP API port number may be changed using AT commands (AT\$UDPAPI) if desired. The modem's default UDP API port number is 1720 (0x06B8).
- Bytes 4 - 5: 16-bit length of UDP packet. This is the data length only; it does not include the IP header length. This length must be filled in for each message depending upon the amount of data in the packet.
- Bytes 6 - 7: 16-bit UDP checksum. This checksum may be used to validate the UDP packet. If the value is 0, then the checksum is ignored.

4.3 TCP Header

The Transmission Control Protocol (TCP) header consists of 20 bytes. The definition and minimal implementation consists of the following (see RFC 793 for further details):

Bytes	Bits 0 – 7	Bits 8 – 15							Bits 16 – 23	Bits 24 – 31
0 – 3	Source Port							Destination Port		
4 – 7	Sequence Number									
8 – 11	Acknowledgement Number									
12 – 15	Data Offset	Reserved	URG	ACK	PSH	RST	SYN	FIN	Window	
16 – 19	Checksum							Urgent Pointer		

Table 5 - TCP Header (RFC 793)

Bytes 0 - 1: 16-bit source port number

Bytes 2 - 3: 16-bit destination port number. For messages from the host to the modem, this is the port number of the modem's TCP API port. The modem's TCP API port number may be changed using AT commands (AT\$TCPSRC) if desired. The modem's default TCP API port number is 1024 (0x0400).

Bytes 4 - 7: 32-bit sequence number of the first data octet in this segment

Bytes 8 - 11: 32-bit acknowledge number

Bytes 12 - 15:

4 – bits: Data Offset, number of 32 bit words in the TCP header indicating where data begins

6 – bits: Reserved.

URG: Urgent Pointer field significant

ACK: Acknowledgment field significant

PSH: Push function

RST: Reset the connection

SYN: Synchronize sequence numbers

FIN: No more data from sender

16 bits: Number of data octets beginning with the one indicated in the acknowledgement field, which the sender of this segment is willing to accept

Bytes 16 - 17: 16-bit checksum

Bytes 18 - 19: Urgent Pointer

4.4 API Header

Configuration commands/messages can be sent to the modem either OTA or when a DUN connection is present. Commands sent over a DUN connection can only be sent via UDP/IP. However, commands sent OTA can be sent via UDP/IP or TCP/IP. Table 1 describes a high level overview for data sent over UDP/IP while table 2 describes a high level overview for data sent over TCP/IP. The API commands provide easy integration and message parsing for the embedded developer and application developer. The Registration of Unsolicited message registers the requestor's IP address and Port number and sends unsolicited messages to the requestor's IP address and Port number.

The base API message header is 4 bytes long for commands sent via UDP/IP or 6 bytes long for commands sent via TCP/IP. The API message header, for both UDP/IP and TCP/IP, can be extended up to an additional 255 bytes by the inclusion of an API Optional Header. The Supported API number and commands are described in table 5 below. The definition and minimal implementation consists of the following:

Messages sent via UDP/IP has the following API header

- Bytes 0 - 1: 16-bit API number
- Bytes 2: 8-bit Command Type information. This value determines the type of message being sent or received by the host
- Bytes 3: API Optional Header Size. This field defines the size of the API Optional Header in Bytes. This field is set to zero (0) if an API Optional Header is not included.
- Bytes 4 thru (4+m): API Optional Header. See section 4.4.7 for details

Messages sent via TCP/IP has the following API header

- Bytes 0 - 1: 16-bit Data length (data length should include the 6 byte of API header as part of its length – ex: **00 1a** in below given example)
- Bytes 2 - 3: 16-bit API number (ex: **00 0a** in below given example)
- Bytes 4: 8-bit Command Type information. This value determines the type of message being sent or received by the host (ex: **08** in below given example)
- Bytes 5: API Optional Header Size. This field defines the size of the API Optional Header in Bytes. This field is set to zero (0) if an API Optional Header is not included.(ex: **00** in below given example)
- Bytes 6 thru (6+m): API Optional Header. See section 4.4.7 for details

Example 26 byte TCP connect ID message:

```
00 1a 00 0a 08 00 31 32 33 34 35 36 37 38 39 30 |..'....1234567890|
31 32 33 34 35 36 37 38 39 30 |1234567890|
```

API number (values given below are decimal)		Command Type	API Optional Header Size	Direction	
Byte - 0	Byte - 1	Byte - 2	Byte - 3	Direction	
0 - 4 Reserved 5 - GPS Binary Read* 6 - 65535 Reserved		0 (Read Request)	0	Modem ← OTA	
0 - Unsolicited Msg Request 1 - 9 Reserved 10 - ACK 11 - Password 12 - 65535 Reserved		1 (Write Request)	0	Modem ← OTA	
API number (values given below are decimal)		Command Type	API Optional Header Size	Direction	
Byte - 0	Byte - 1	Byte - 2	Byte - 3	Direction	
0 - Unsolicited Msg 1 - 3 Reserved 4 - ASCII Event Data (Param2 ≥ 256)* 5 - Binary Event Data* 6 - Reserved 7 - ASCII TAIP Data* 8 - \$MSGSDND Data 9 - Reserved 10 - ASCII Event Data (Param2 < 256)		2 (General Status Information)	(Size of API Optional Header)	Modem → OTA	
Echo first 2 bytes of an incoming data		3 (Error)	(Size of API Optional Header)	Modem → OTA	
0 - 65535		4 (AT Command)	0	Modem ← OTA	
Echo first 2 bytes of an incoming AT command request		5 (AT Command Response)	(Size of API Optional Header)	Modem → OTA	
First 2 bytes of AT\$UDPMSG command in ASCII format		6	(Size of API Optional Header)	Modem ↔ OTA	
First 2 bytes of AT\$UDPMSG command in Binary format		7	(Size of API Optional Header)	Modem ↔ OTA	
10		8	0	Modem ID	Modem → OTA (TCP only)

* GPS data only transmitted on select devices

Table 6 - API Table

4.4.1 Wakeup Messages

The wakeup/keep-alive message is sent to the local host as a “Status” command type message. Following data will be sent by the modem at the periodic interval configured by the AT\$WAKEUP command:

Bytes	Data Description	Comments
0	0x00	Parameter Number
1	0x0A	
2	0x02	Status
3	0x00	Reserved
4	0x20	Parameter Number (1)
5	0x20	
6	0x20	
7	0x20	
8	0x20	
9	0x20	
10	0x20	
11	0x20	
12	0x20	
13	0x31	
14	0x20	
15	0x20	Modem ID (12345678901234567890)
16	0x31	
17	0x32	
18	0x33	
19	0x34	
20	0x35	
21	0x36	
22	0x37	
23	0x38	
24	0x39	
25	0x30	
26	0x31	
27	0x32	
28	0x33	
29	0x34	
30	0x35	
31	0x36	
32	0x37	
33	0x38	
34	0x39	
35	0x30	
36	0x20	

Table 7 - Wakeup/keep alive message

4.4.2 Send Password to Modem

The modem requires that the remote request must come from a “friendly IP” (set by AT\$FRIEND command) or be the most recent IP to correctly provide the password. All remote requests will be accepted if the password is set to NULL. The password has to be 8 bytes alphanumeric (A-Z, 0–9) upper case characters only. Password should be filled with NULL characters if the password is less than 8 characters long. Send the following data to send the password:

Bytes	Data Description	Comments
0	0x00	Parameter Number
1	0x0B	
2	0x01	Write Request
3	0x00	Reserved
4	0x41	Password (ABCDEF) <i><8 – Alpha-Numeric upper case characters (0 – 9 or A – Z)></i>
5	0x42	
6	0x43	
7	0x44	
8	0x45	
9	0x46	
10	0x00	
11	0x00	

Table 8 - Sending of password to the modem OTA

4.4.3 Read/Write AT Command Request

AT commands mentioned in the *Enabler-IIG AT Command Set GSM0108PB001MAN* document can be sent to the modem when a DUN session is present or OTA. The host-to-modem message structure for reading/writing an AT command is as follows:

Bytes	Data Description	Comments
0	0x00	Sequence Number
1	0x01	
2	0x04	AT Command Read/Write
3	0x00	Reserved
4	0x41	AT Command (ATI)
5	0x54	
6	0x49	

Table 9 - AT command to the modem

The modem will respond with the following message:

Bytes	Data Description	Comments
0	0x00	Sequence Number
1	0x01	
2	0x05	AT Command Response
3	0x00	Reserved
4	0x0D	AT Command Response (Enfora, Inc.)
5	0x0A	
6	0x45	
7	0x6E	
8	0x66	
9	0x6F	
10	0x72	
11	0x61	
12	0x2C	
13	0x20	
14	0x49	
15	0x6E	
16	0x63	
17	0x2E	
18	0x0D	
19	0x0A	

Table 10 - AT command response

4.4.4 Unsolicited Messages

A host has to register, with the modem, to receive any unsolicited messages. The modem saves the host's IP address and Port number. Unsolicited messages will then be sent to the IP and Port number that the user sends its request from. The host should send the following message structure to register the reception of unsolicited messages:

Bytes	Data Description	Comments
0	0x00	Parameter Number (unsolicited message registration request)
1	0x00	
2	0x01	Write Request
3	0x00	Response status

Table 11 - Message structure for registration of unsolicited messages

The modem will send the following message structure for the registered unsolicited messages:

Bytes	Data Description	Comments
0	0x00	Parameter Number (unsolicited message registration request)
1	0x00	
2	0x02	Write Request
3	0x00	Response status
4 - n	...	Unsolicited message

Table 12 - Message structure of an incoming unsolicited message

4.4.5 ACK Messages

To disable sending of a message that requires acknowledgement, the server should send the following data, indicating an ACK, to stop sending of the messages.

NOTE: Acknowledge message should only be sent for messages configured to be sent via UDP/IP

Bytes	Data Description	Comments
0	0x00	Parameter Number
1	0x0A	
2	0x01	Write Request
3	0x00	Response status

Table 13 - ACK message

4.4.6 ERROR Messages

If there is an error in processing an API request by the modem, the modem will respond with the following message structure

Bytes	Data Description	Comments
0	xx	First two bytes of an incoming request will be echoed here
1	xx	
2	0x03	ERROR Response
3	0x00	Response status

Table 14 - Error message

4.4.7 API Optional Header

The API Optional Header can be appended to the end of the UDPAPI or TCPAPI Header. It is comprised of a sequence of Optional Header Fields as shown below.

Optional Header Field	Bytes	Bits 0-7
1	0	Size (m)
	1	Type
	2 thru (m-1)	Data
2	m	Size (n)
	(m+1)	Type
	(m+2) thru (m+n-1)	Data
3	(m+n)	Size (p)
	(m+n+1)	Type
	(m+n+1) thru (m+n+p-1)	Data
...	(m+n+p)	...

Table 15 - API Optional Header Format

Each Optional Header Field has the following generic format:

- Byte 0: 8 bit field indicating the size of the Optional Header Field including Size and Type Fields
- Byte 1: 8 bit field indicating the type of data contained in Data Field. Currently defined types are shown in the table below.
- Bytes 2+: Optional Header Data Field. The content is defined by the Optional Header Type

Currently there are four defined Optional Header Types. The Complete list of defined types is as follows:

Optional Header Type	Definition	Reference
0	End of Options Sequence.	4.4.7.1
1	MDMID.	4.4.7.2
2	Output Message Event Format.	4.4.7.3
3	Event Sequence Number.	4.4.7.4

Table 16 - Optional Header Type

The inclusion of the Optional Headers is selected by the AT\$APIOPT and is only sent for applicable API message types. The following table defines when the Optional Headers are applicable based on the API Number and Command Types. For complete Syntax of the AT\$APIOPT Command, see *GSM0308AT001 - Enabler III AT Command Set*.

API Message		Optional Fields		
UDP-API Number	Command Type	MDMID	Event Sequence Number	Output Message Event Format
0 – 4 Reserved	0 (Read Request)	N/A	N/A	N/A
5 – GPS Binary Read		N/A	N/A	N/A
6– 65535 Reserved		N/A	N/A	N/A
0 – Unsolicited Msg Request	1 (Write Request)	N/A	N/A	N/A
1 – 9 Reserved		N/A	N/A	N/A
10 – ACK		N/A	N/A	N/A
11 – Password		N/A	N/A	N/A
12 – 65535 Reserved		N/A	N/A	N/A
0 – Unsolicited Msg	2 (General Status Information)	TCP/UDP	N/A	N/A
1 – 3 Reserved		TCP/UDP	N/A	N/A
4 – ASCII Event Data (Param2>=256)		TCP/UDP	TCP/UDP	TCP/UDP
5 – Binary Event Data		TCP/UDP	TCP/UDP	TCP/UDP
6 – Reserved		TCP/UDP	N/A	N/A
7 – ASCII TAIP Data		TCP/UDP	N/A	N/A
8 – \$MSGSND Data		TCP/UDP	N/A	N/A
9 – Reserved		TCP/UDP	N/A	N/A
10 – ASCII Event Data (Param2<256)		TCP/UDP	TCP/UDP	TCP/UDP
Echo first 2 bytes of an incoming data		3 (Error)	TCP/UDP	N/A
0 - 65535	4 (AT Command Request)	N/A	N/A	N/A
Echo first 2 bytes of an incoming AT command request	5 (AT Command Response)	TCP/UDP	N/A	N/A
First 2 bytes of AT\$UDPMSG command in ASCII format	6	TCP/UDP (Modem to OTA only)	N/A	N/A
First 2 bytes of AT\$UDPMSG command in Binary format	7	TCP/UDP (Modem to OTA only)	N/A	N/A
10	8	N/A	N/A	N/A

Table 17 - Conditions for Including Optional Fields into API Optional Header

A detailed description for each of the Optional Field types is discussed in the following paragraphs.

4.4.7.1 End of Option Sequence – Type 0

This API Optional Header Field Type indicates it is the last of the Optional Header Fields. It is only used if the API Optional Header Size is defined to be larger than the combined Option Header sizes. The size field for this type shall include the remaining bytes of the API Optional Header. The Data Field shall contain all zeros. The primary purpose of this type is to allow padding to re-align the Data contents of the API Message to a word boundary. To accommodate single byte padding of the API Optional Header a size field of one (1) shall be allowed as the last byte of the API Optional Header. If one (1) is seen in the size field it shall be interpreted as the last byte of the API Optional Header with the Optional Header Field Type assumed as End of Option Sequence. The End of Option Sequence formats are shown below:

Description	Size	Type	Data	Data
	(Byte 0)	(Byte 1)	(Byte 2)	(Byte 3-n)
Single Byte Pad	0x01	-	-	-
Two Byte Pad	0x02	0x00	-	-
Three Byte Pad	0x03	0x00	0x00	-
Multi-Byte Fill	(n)	0x00	0x00	0x00(s)

Table - 18. End of Optional Header Sequence Formats

4.4.7.2 MDMID – Type 1

The MDMID Optional Header Field allows servers to easily identify the source of the packet for easier handling. The Optional Header Data Field would include the value set by the AT\$MDMID command. No additional padding will be added to the data. An example for a MDMID of ‘12345678901234567890’ is as follows:

Bytes	Data Description	Comments
0	0x16 (22)	Size
1	0x01	Type = MDMID
2	0x31	MDMID (12345678901234567890)
3	0x32	
4	0x33	
5	0x34	
6	0x35	
7	0x36	
8	0x37	
9	0x38	
10	0x39	
11	0x30	
12	0x31	
13	0x32	
14	0x33	
15	0x34	
16	0x35	
17	0x36	
18	0x37	
19	0x38	
20	0x39	
21	0x30	

Table 19 - MDMID Optional Header Field Format

4.4.7.3 Output Message Event Format- Type 2

The Output Message Event Format-Optional Header Field is available to messages generated by the event engine. It contains the 32-bit <param2> value of the Output Message Event Format. The inclusion of this option field is selected by the AT\$APIOPT Command, see *GSM0308AT001 - Enabler III AT Command Set*. The format for this optional header field is as follows:

Bytes	Data Description	Comments
0	0x06	Size
1	0x02	Type = Output Message Event Format
2	0x12	Output Message Event Format (0x12345678)
3	0x34	
4	0x56	
5	0x78	

Table 20 - Output Message Event Format Header Field Format

4.4.7.4 Event Sequence Number – Type 3

The Event Sequence Number-Optional Header Field is available to messages generated by the event engine. The option data field would include the value of the Event Sequence Number. The Event Sequence Number increments with each Output Event. Its initial value is set by the AT\$EVSEQ Command, see AT Command Set Reference (Enfora Document GSM0102PB001MAN). The Event Sequence Number is not reset by power off or the AT&F command. The inclusion of this option field is selected by the AT\$APIOPT Command. When the Event Sequence Number reaches its maximum value it will roll over to zero and restart counting. The size of the Event Sequence Number can be set to 8, 16, 24, 32 bits by the AT\$APIOPT Command, see *GSM0308AT001 - Enabler III AT Command Set*. The Event Sequence Number Optional Header Field formats are shown below for all available sizes:

Description	Size	Type	Data	Data	Data	Data
	(Byte 0)	(Byte 1)	(Byte 2)	(Byte 3)	(Byte 4)	(Byte 5)
8-bit Format	0x03	0x03	0x78	-	-	-
16-bit Format	0x04	0x03	0x56	0x78	-	-
24-bit Format	0x05	0x03	0x34	0x56	0x78	-
32-bit Format	0x06	0x03	0x12	0x34	0x56	0x78

Table 21 - Example of Event Sequence Number Header - Seq Num = 0x12345678

5 Terms Explained

5.1 Big Endian

Big endian format means that the most significant byte is sent first. For example, a decimal value of 1234567 will be displayed as hex 0x0012D687. While sending this data over a communication link, the most significant byte – 0x00 is sent first followed by 0x12, followed by the third byte 0xD6, followed by the least significant byte 0x87.

1234567 (decimal) = 0x0012D687 (hex)

Byte-0	Byte-1	Byte-2	Byte-3
0x00	0x12	0xD6	0x87

5.2 Byte

In this document, One Byte = 8 bits. Bit-0 is the right most bit and is also referred to as pin-1 while Bit-7 is the left most bit and is referred to as Pin-8.

Byte							
Upper Nibble				Lower Nibble			
Bit-7	Bit-6	Bit-5	Bit-4	Bit-3	Bit-2	Bit-1	Bit-0
Pin-8	Pin-7	Pin-6	Pin-5	Pin-4	Pin-3	Pin-2	Pin-1
2 ⁷	2 ⁶	2 ⁵	2 ⁴	2 ³	2 ²	2 ¹	2 ⁰

5.3 Little Endian

Little endian format means that the least significant byte is sent first. For example, a decimal value of 1234567 will be displayed as hex 0x0012D687. While sending this data over a communication link, the least significant byte – 0x87 is sent first followed by 0xD6, followed by the third byte 0x12, followed by the most significant byte 0x00.

1234567 (decimal) = 0x0012D687 (hex)

Byte-0	Byte-1	Byte-2	Byte-3
0x87	0xD6	0x12	0x00

6 Example:

Sending AT Command:

Note: IP and UDP checksum are not calculated in this example. They are left for the user to calculate as an exercise.

Bytes	Description	Hex Value	Notes
0	Version Length:	45	
1	Type of Service:	00	
2 & 3	Length of Packet:	00 23	IP + UDP Header + Message Data
4 & 5	Identification:		00 00
6 & 7	Fragmentation Offset:	00 00	
8	Time to live:	00	
9	Protocol:	11	UDP
10 & 11	IP Header Checksum:	00 00	
12,13,14,15	Source IP:	A6 85 AB 13	166.133.171.19
16,17,18,19	Destination IP:	C7 F5 B4 0D	199.245.180.13
20 & 21	Source Port:	04 4C	1100
22 & 23	Destination Port:	06 B8	1720
24 & 25	Length of Packet:	00 04	
26 & 27	UDP Checksum:	00 00	
28 & 29	UPD API Command:	00 01	UDP API 00 01
30	UDP API Read:	04	'Sequence Number AT Command Request = 04
31	UDP API Optional: Header Size	No Optional Header	
32,33,34	AT Command	41 54 49	AT Command = ATI

Response from modem to host:

Bytes	Description	Hex Value	Notes
0	Version Length:	45	
1	Type of Service:	00	
2 & 3	Length of Packet:	00 30	IP + UDP Header + Message Data
4 & 5	Identification:	00 00	
6 & 7	Fragmentation Offset:	00 00	
8	Time to live:	00	
9	Protocol:	11	UDP
10 & 11	IP Header Checksum:	00 00	
12,13,14,15	Source IP:	A6 85 AB 13	166.133.171.19
16,17,18,19	Destination IP:	C7 F5 B4 0D	199.245.180.13
20 & 21	Destination Port:	06 B8	1720
22 & 23	Source Port:	04 4C	1100
24 & 25	Length of Packet:	00 04	
26 & 27	UDP Checksum:	00 00	
28 & 29	UPD API Command:	00 01	UDP API 00 01 'Sequence Number
30	UDP API Status:	05	AT Command Response = 05
31	UDP API Optional: Header Size	No Optional Header	
32,33,34,35	AT Command Response	0D 0A 45 6E	Enfora, Inc.
36,37,38,39	Response continued	66 6F 72 61	
40,41,42,43	Response continued	2C 20 49 6E	
44,45,46,47	Response continued	63 2E 0D 0A	

Receiving UDP ASCII Event Data with Option Header MDMID and Sequence Number Enabled

Bytes	Description	Hex Value	Notes
0	Version Length:	45	
1	Type of Service:	00	
2 & 3	Length of Packet:	00 32	IP + UDP Header + Message Data
4 & 5	Identification:	00 00	
6 & 7	Fragmentation Offset:	00 00	
8	Time to live:	00	
9	Protocol:	11	UDP
10 & 11	IP Header Checksum:	00 00	
12,13,14,15	Source IP:	A6 85 AB 13	166.133.171.19
16,17,18,19	Destination IP:	C7 F5 B4 0D	199.245.180.13
20 & 21	Destination Port:	06 B8	1720
22 & 23	Source Port:	04 4C	1100
24 & 25	Length of Packet:	00 04	
26 & 27	UDP Checksum:	00 00	
28 & 29	UPD API Number:	00 0A	ASCII Event Data
30	UDP API Status:	02	General Status Info
31	UDP API Optional: Header Size	0B	Combined Optional Header Size

32	Optional Header Size:	07	Size of MDMID Optional Header
33	Optional Header Type:	01	Type is MDMID
34 thru 38	Optional Header Data:	31 32 33 34 35	MDMID - '12345'
39	Optional Header Size:	04	Size of Sequence Number Optional Header
40	Optional Header Type:	03	Type is Sequence Number
41 & 42	Optional Header Data:	AB CD	Event Sequence Number 'ABCD'
43 thru 50	Output Message Event	xx xx xx ...	